



ES	<b>Instrucción de montaje</b> ¡Leer primero!	Kit fijación
EN	<b>Assembly instructions</b> Read first!	Fixation Kit
FR	<b>Instruction de montage</b> Lire en premier!	Kit fixation
DE	<b>Montageanleitung</b> Zuerst lesen!	Stützfuß-Kit
PT	<b>Instruções de montagem</b> Ler primeiro!	Kit fixação
IT	<b>Istruzioni di montaggio</b> Leggere per primo!	Kit di fissaggio
NL	<b>Montagehandleiding</b> Eerst lezen!	Bevestigingsset
PL	<b>Instrukcja montażu</b> Najpierw przeczytaj!	Element mocujący
CZ	<b>Montážní návod</b> Čtěte pozorně!	Fixační kit
HU	<b>Szerelési Utasítás</b> Először olvassd el!	Rögzítő készlet
HR	<b>Detaljne upute</b> Prvo procitati!	Kit za montažu
RO	<b>Instructiuni de montaj</b> Intai cititi!	Kit de fixare
RU	<b>Инструкции по монтажу</b> Сначала прочитайте!	Крепежный комплект
GR	<b>Διαβάστε προσεκτικά τις</b> Οδηγίες Συναρμολόγησης!	Κιβώτιο (Kit) Επισκευής
TR	<b>Öncelikle montaj:</b> Talimatlarını okuyunuz!	Montaj kiti
SI	<b>Navodila za sestavljanje</b> Preberite!	Kit za pričvrstitev

# 934-439

Lv7 2021-r3

Modelo-model:



## Kit 6 soportes CRUZ LCV

Lote-Lot-Lot-Lot:

**01-21**

Peso-Weight-Poids-Gewicht:

**3,26 kg / 7,19 lbs**

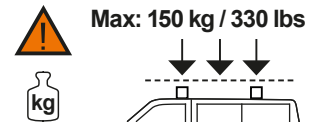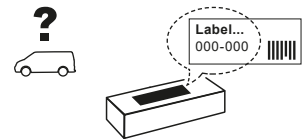

CEE - EEC type approval:

**E9** 26 R- 04 3022

**E9** 26 R- 04 3024




**CITY CRASH** (M)

CRUZBER SAU  
ES-A14018311  
P.I. Las Salinas II  
14960 - Rute - Spain  
[www.cruz-products.com](http://www.cruz-products.com)



1.

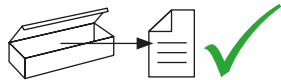

ES Contenido embalaje: ¡Verificar!

EN Package content: Check!

FR Contenu d'emballage: Vérifier!

DE Packungsinhalt: Überprüfen!

PT Contéudo embalagem:  
Verificar!

IT Contenuto della confezione:  
Controllare!

NL Pakket inhoud: Controleer!

PL Zawartość opakowania:  
sprawdź!

CZ Obsah balení: Zkontrolujte!

HU Csomag tartalma: Ellenőrizd!

HR Sadržaj paketa: Provjeri!

RO Pachetul contine: Verificati!

RU Содержание упаковки:  
Проверьте!

GR Ελέγξτε το περιεχόμενο του  
πακέτου!


TR Paket içeriğini: Kontrol ediniz!

SI Vsebina paketa: Preverite!

x1




x6




(500)

x6



x6



2x (828)


2x (829)

2x (830)

2x (012-231)

4x (012-232)

x6



x3



2x (813-073)


4x (813-074)

1x (805-094)

1x (810-128)

1x (810-181)

x6




(821-054)

2. 



50x30 mm



52x35 mm  
Aluminium



**pág. 3,4,5,6,7,8,9,10,11**




**pág. 3,4,5,6,7,8,12,13,14,15**




**pág. 3,4,5,6,7,8,16,17,18,19**

### 3.

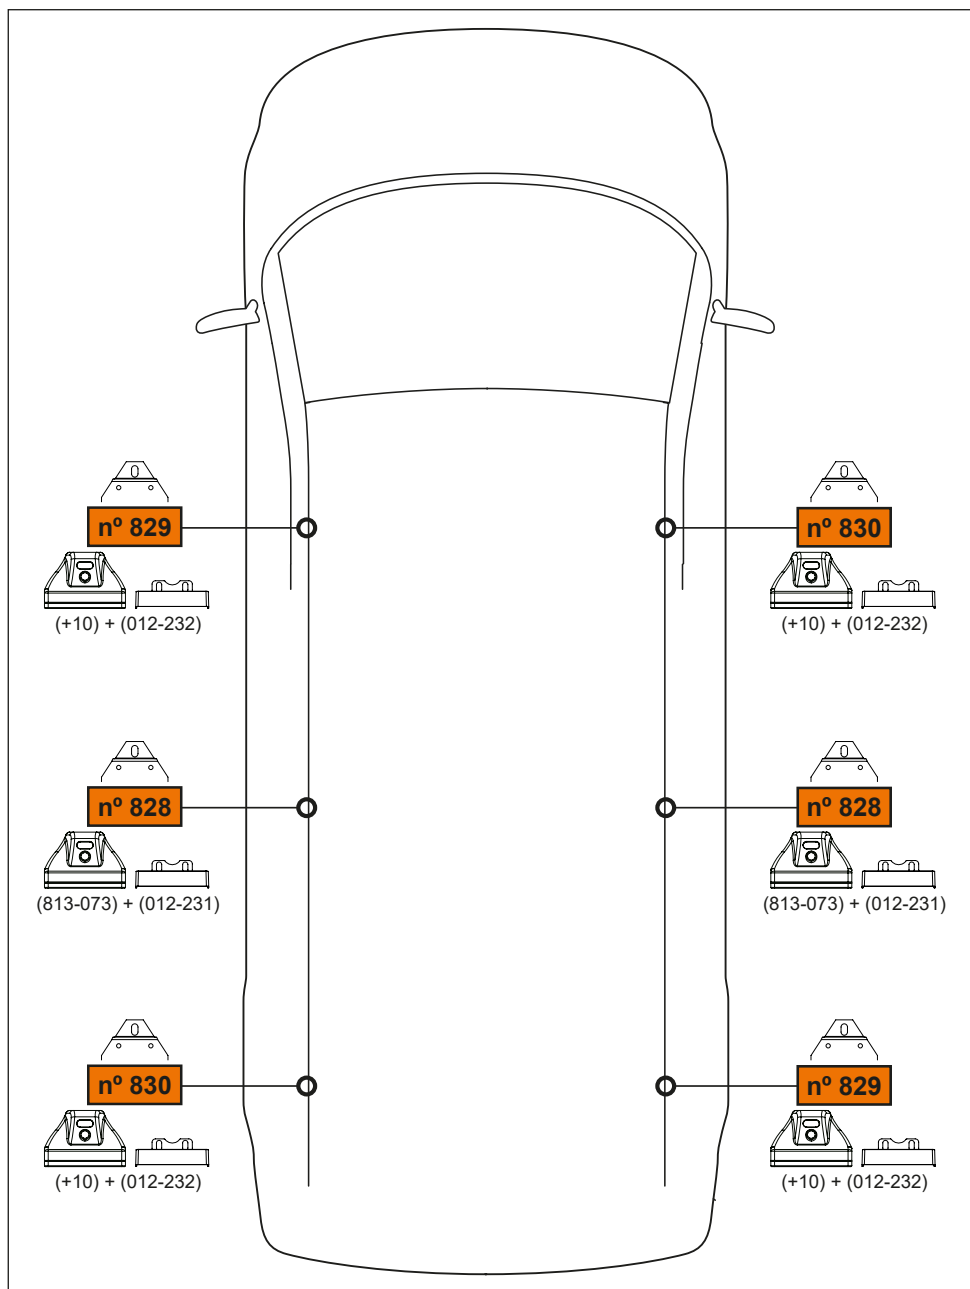


4. 

**Tourneo/Transit Custom (13→) L1H2**


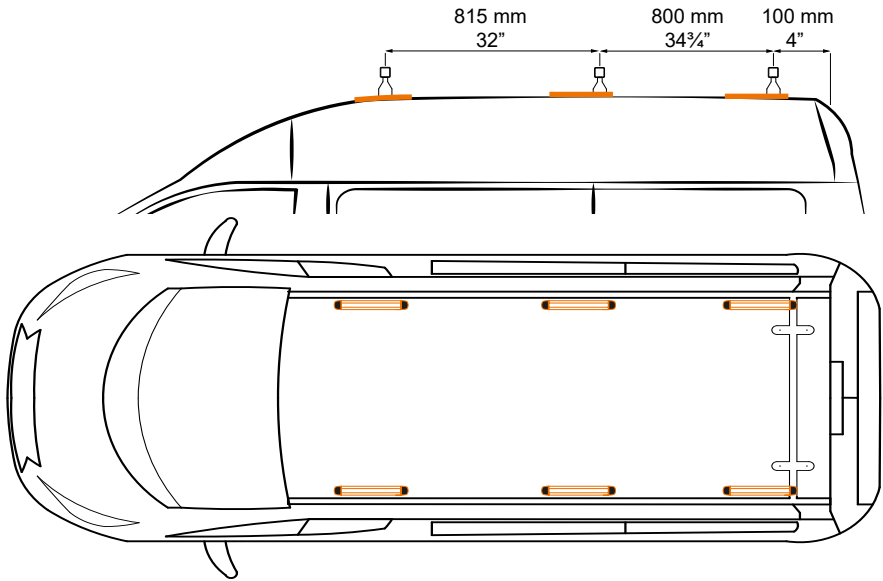


**Tourneo/Transit Custom (13→) L2H2**


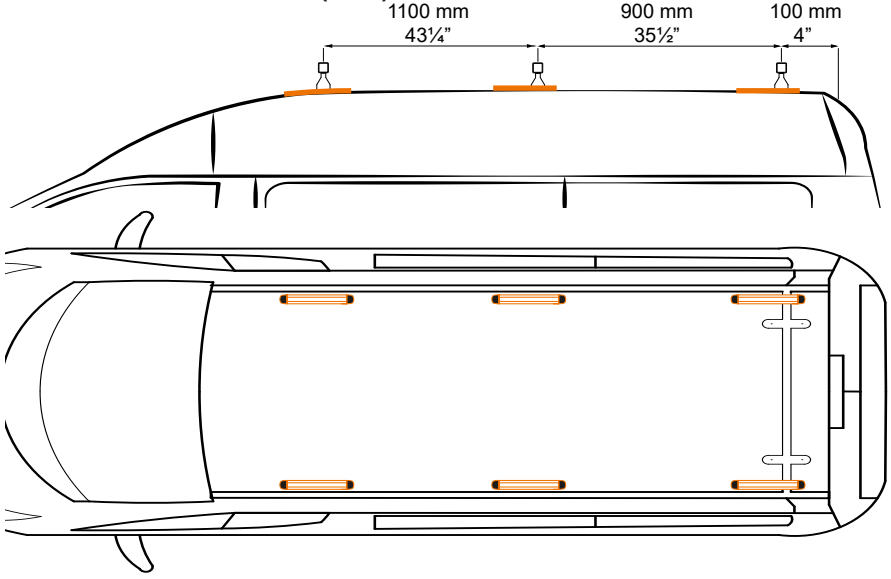


5. 



**Jumpy/Scudo/Expert (07→) L2H2**

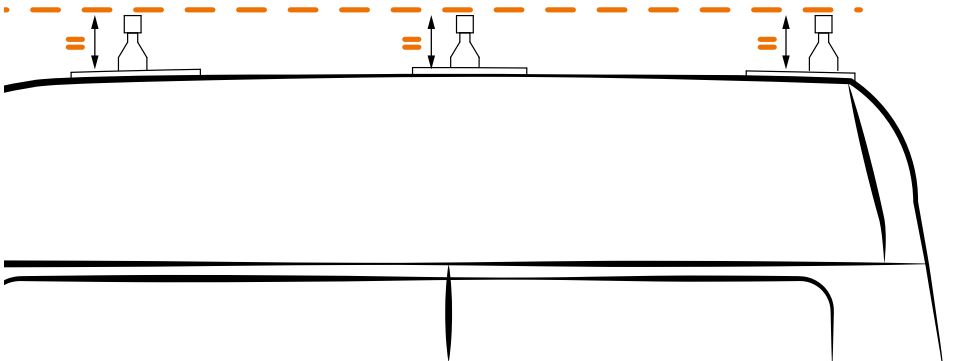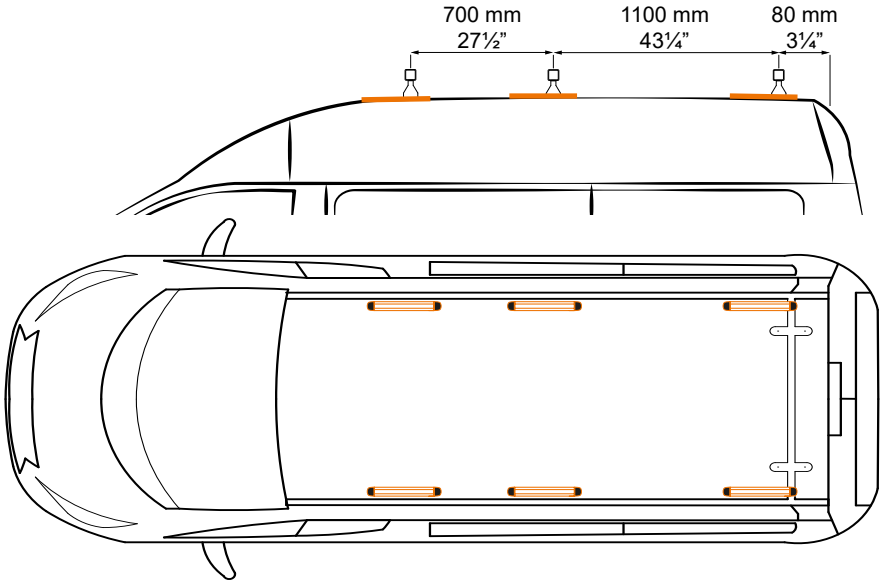

6. 

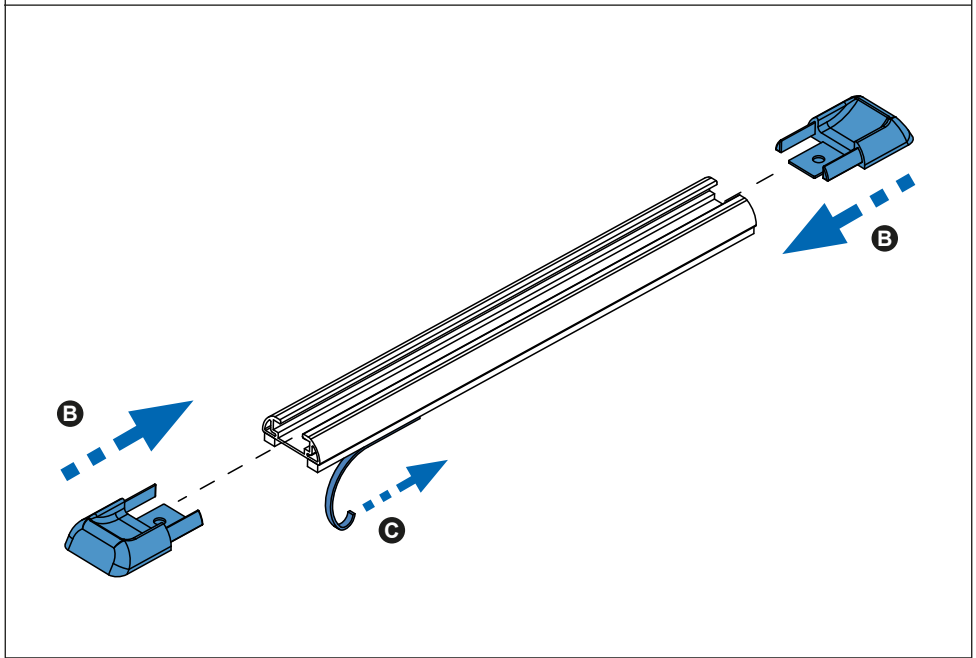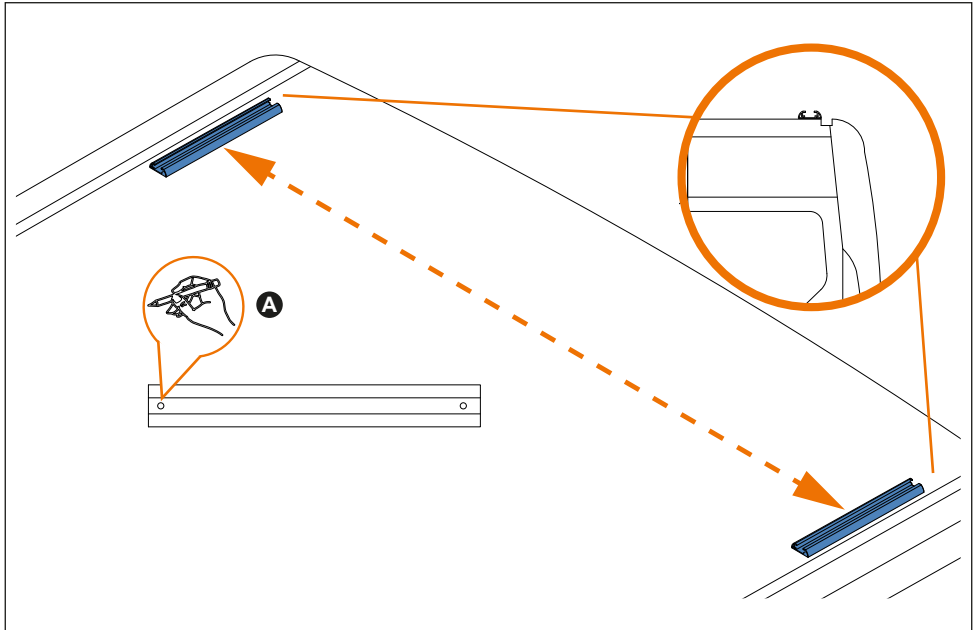


7. 

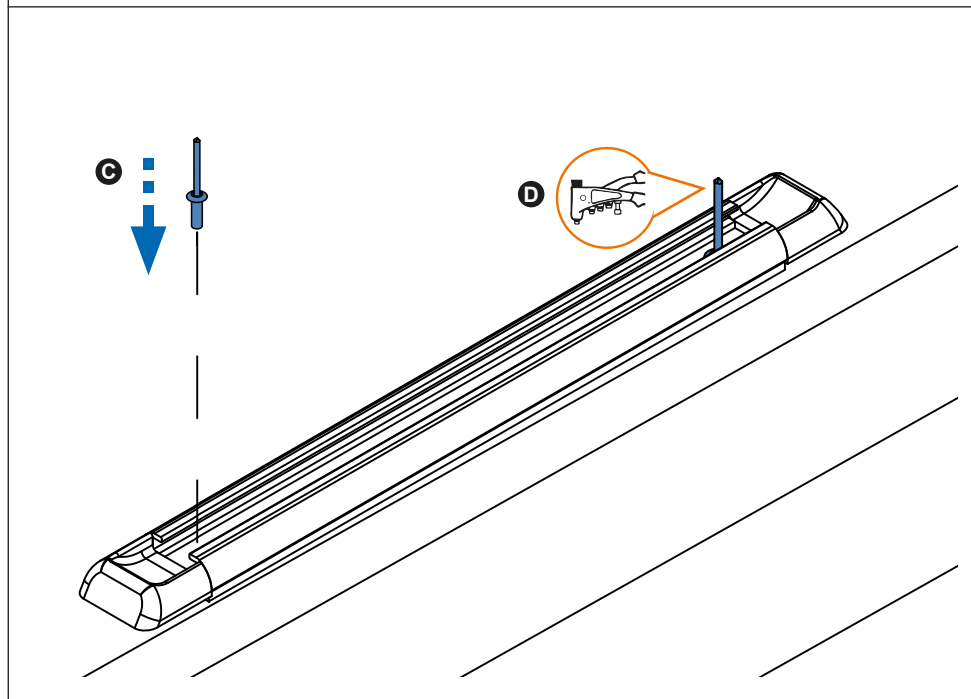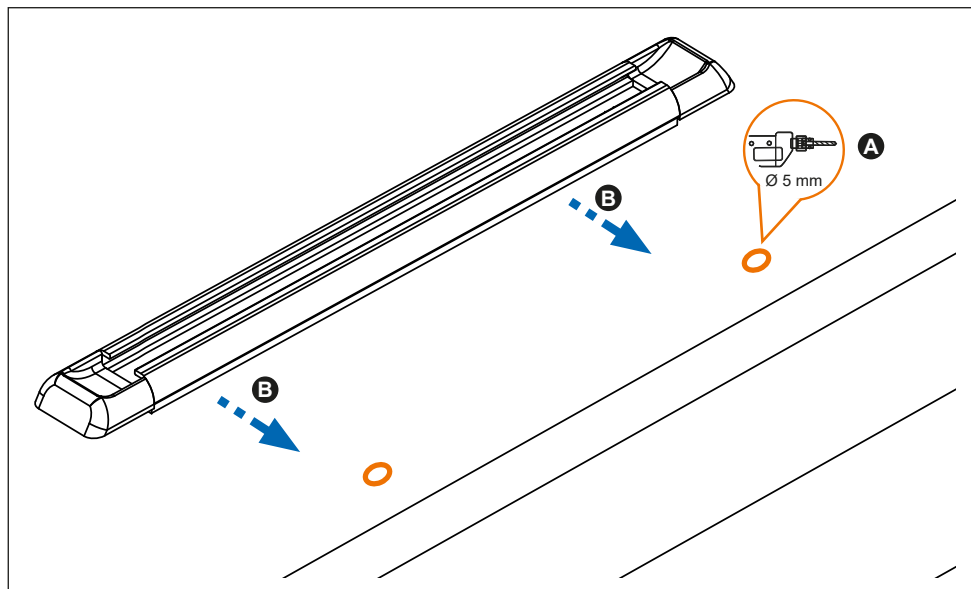





8. 

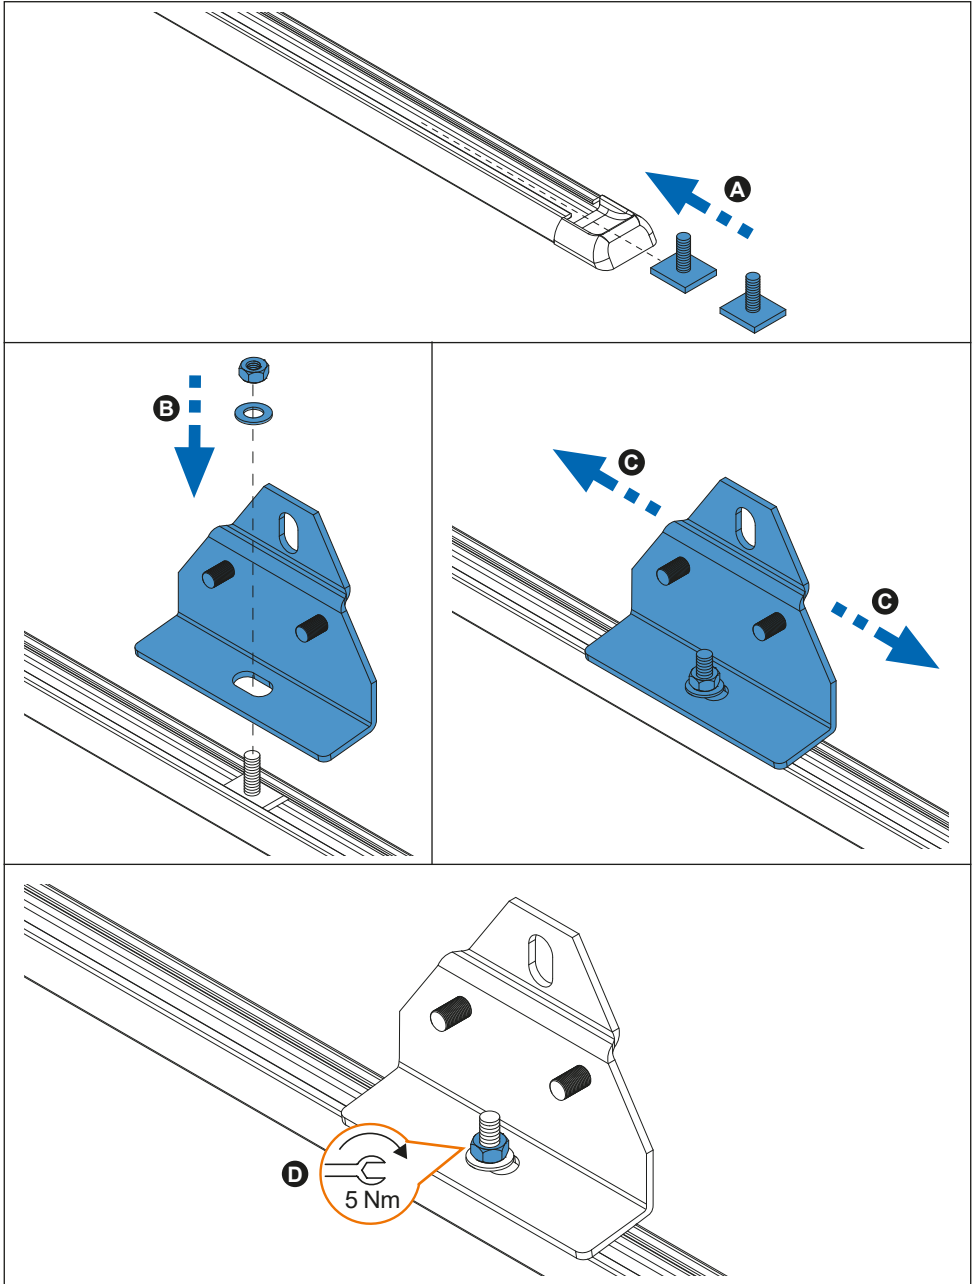



9. 




50x30 mm




52x35 mm  
Aluminium

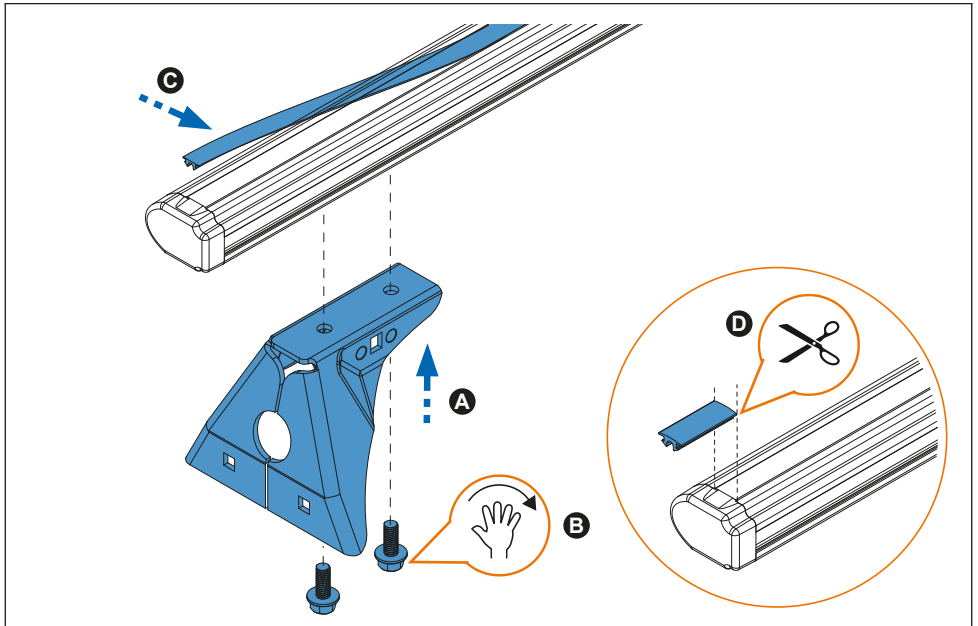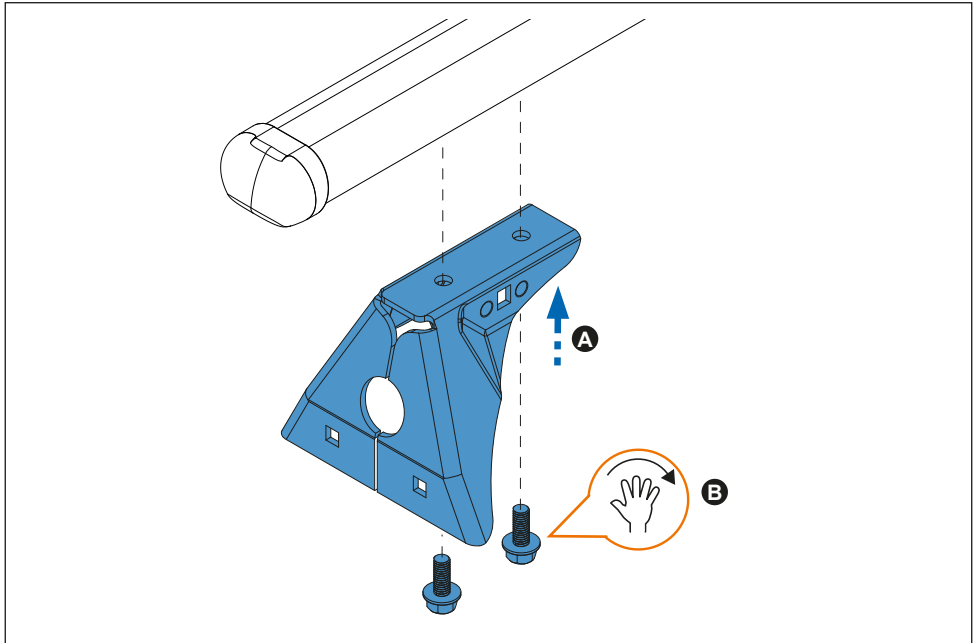



10.




50x30 mm




52x35 mm  
Aluminium

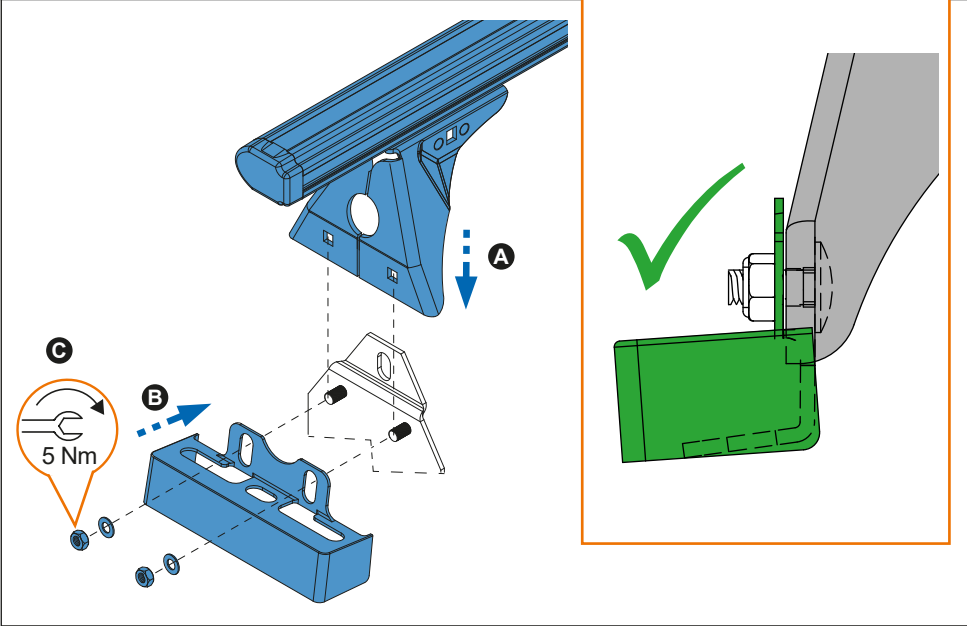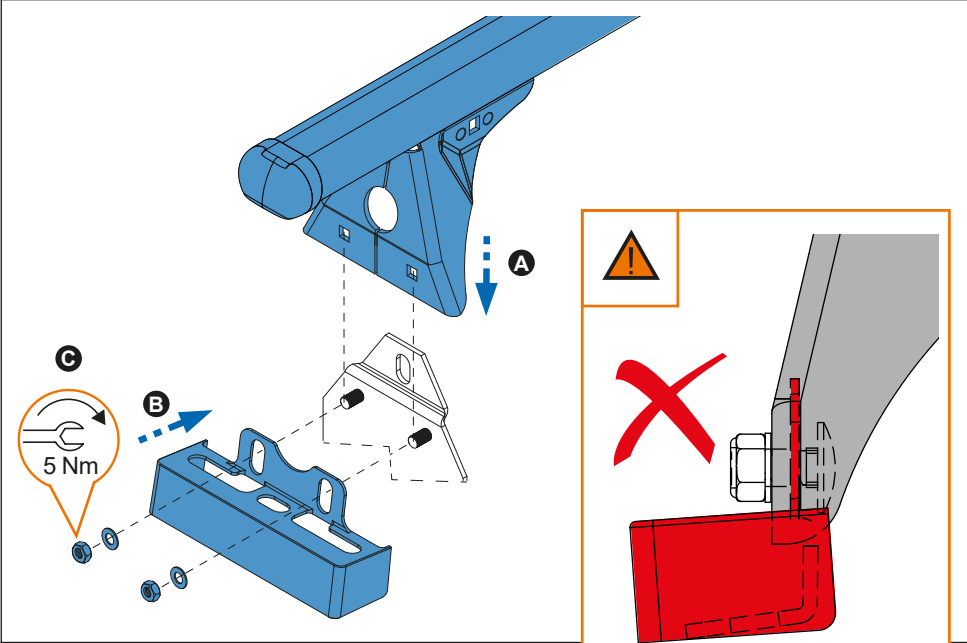



11.



50x30 mm




52x35 mm  
Aluminium

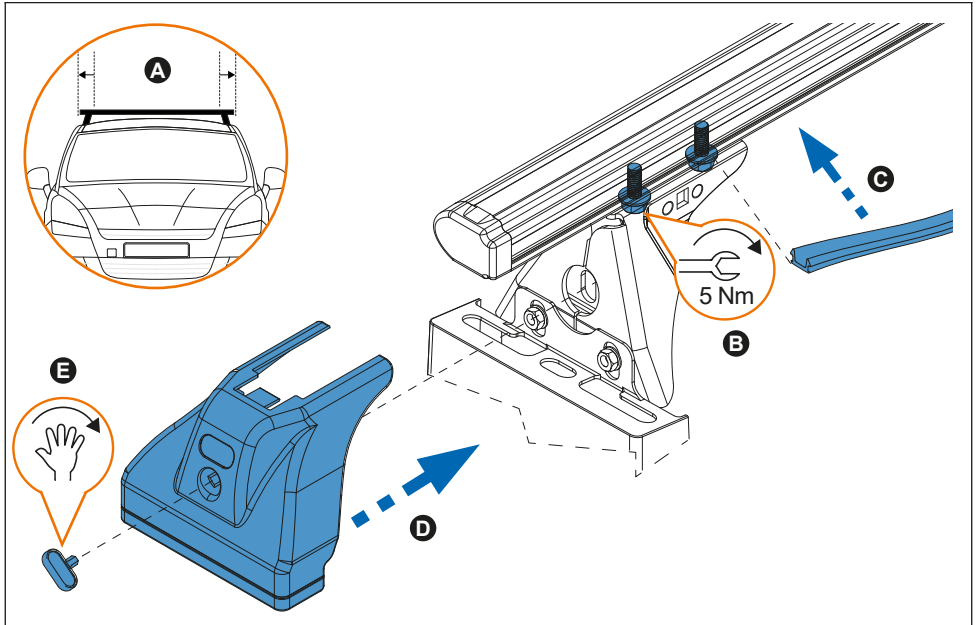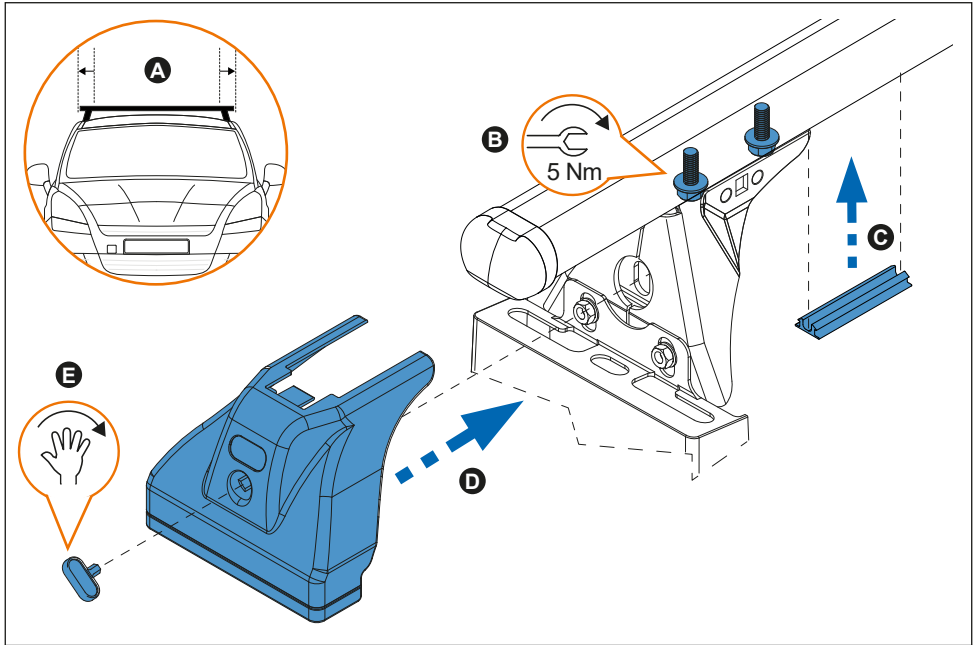


12.




**Tourneo/Transit Custom (13→) L1H2**

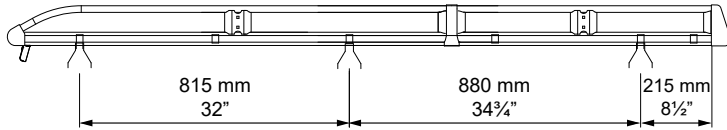

**Tourneo/Transit Custom (13→) L2H2**

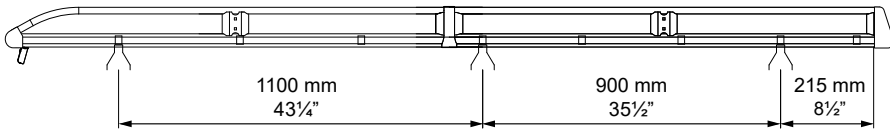


**Jumpy/Scudo/Expert (07→) L2H2**

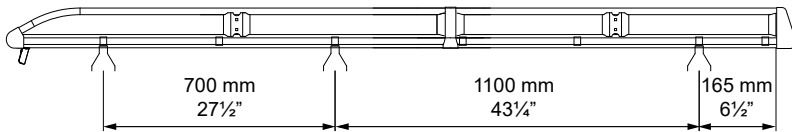


**OPTIONAL  
OPCIONAL**


**Tourneo/Transit Custom (13→) L1H2** **941-109**

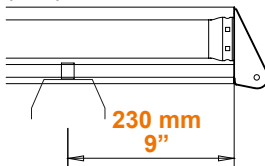



**Tourneo/Transit Custom (13→) L2H2**

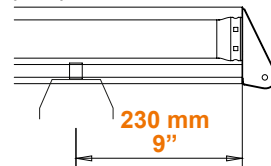



**Jumpy/Scudo/Expert (07→) L2H2**

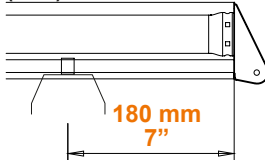


13.

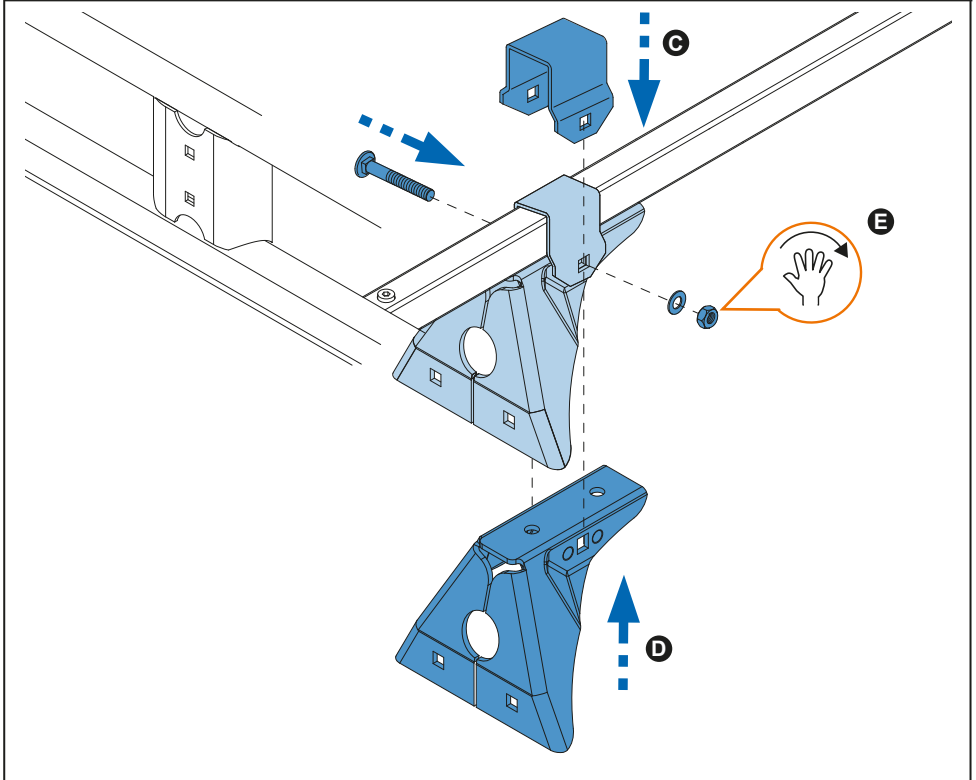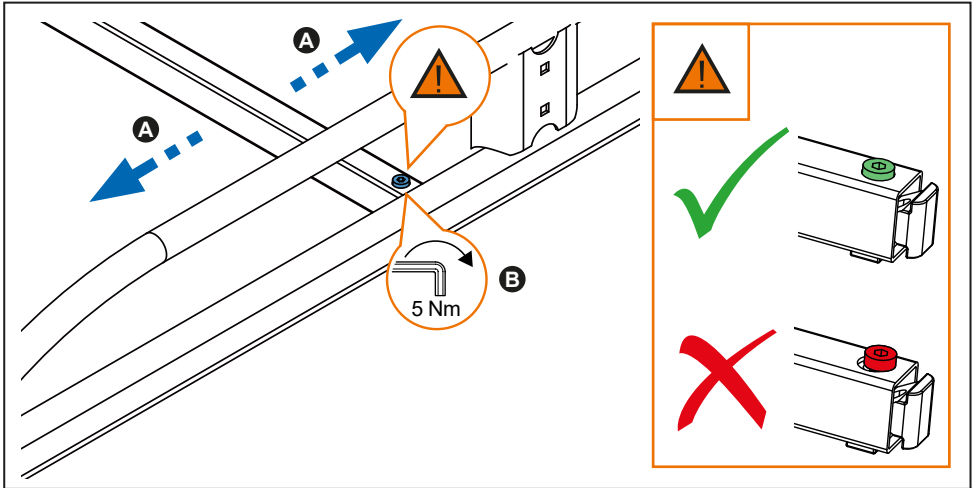

14.


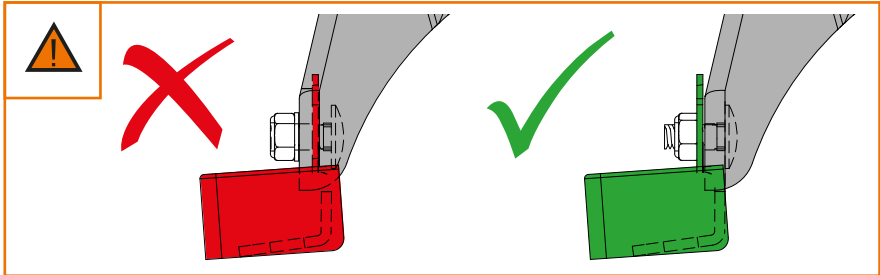
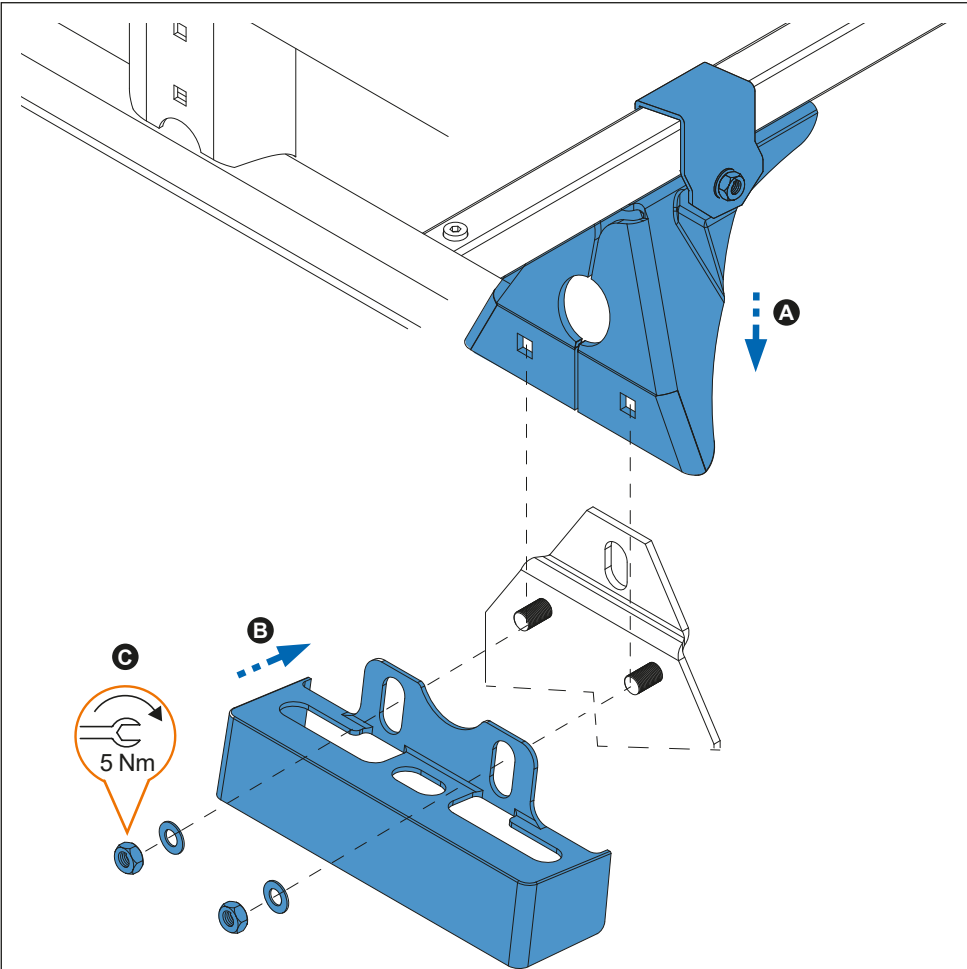


15.

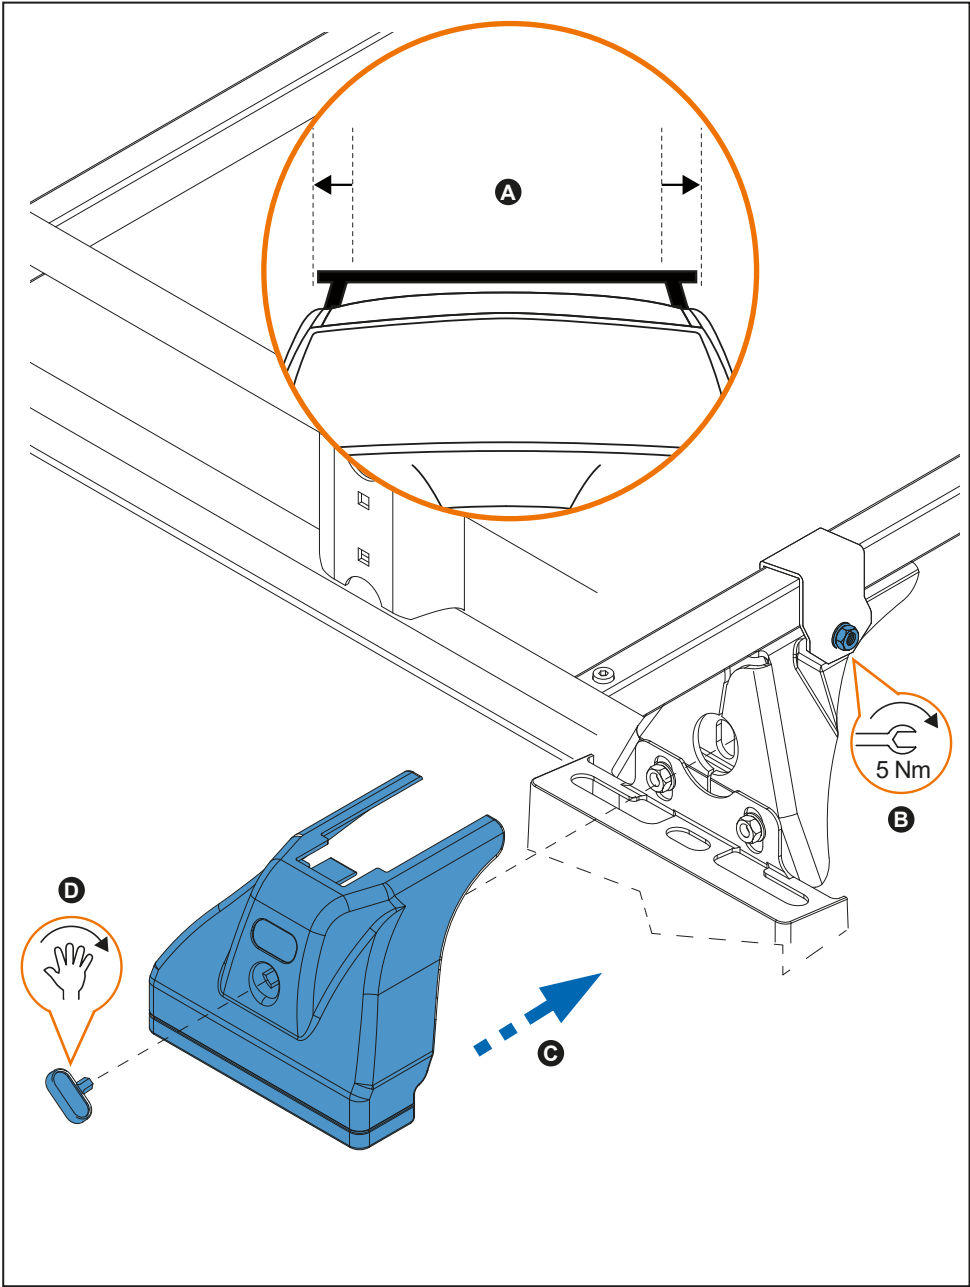






16.

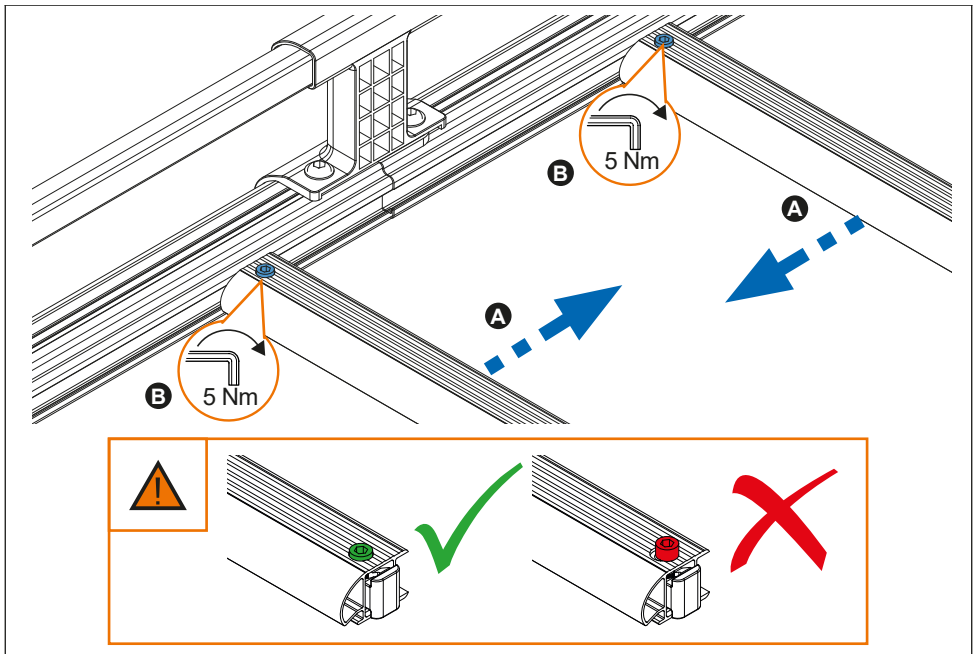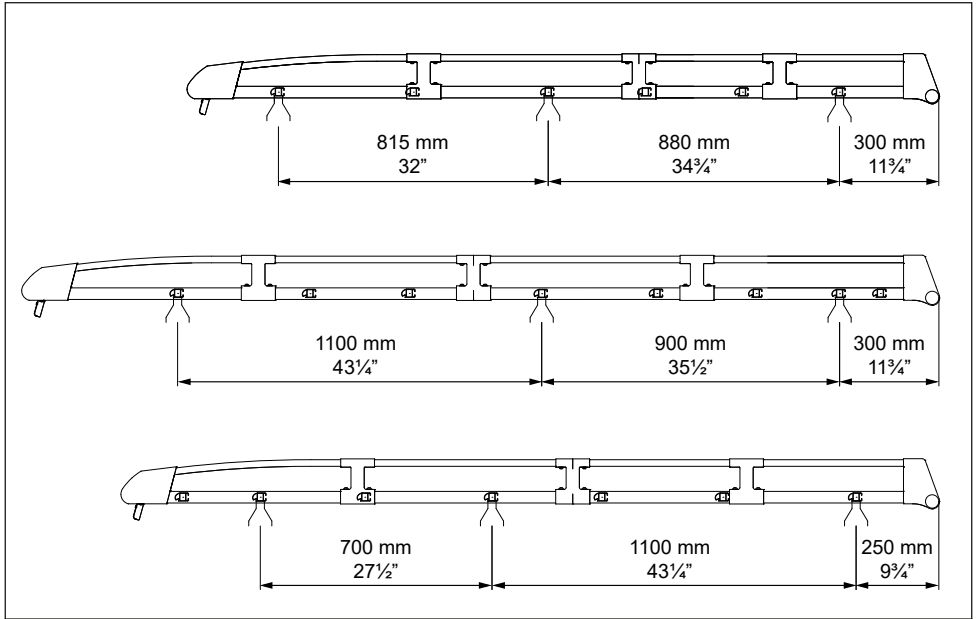

17.

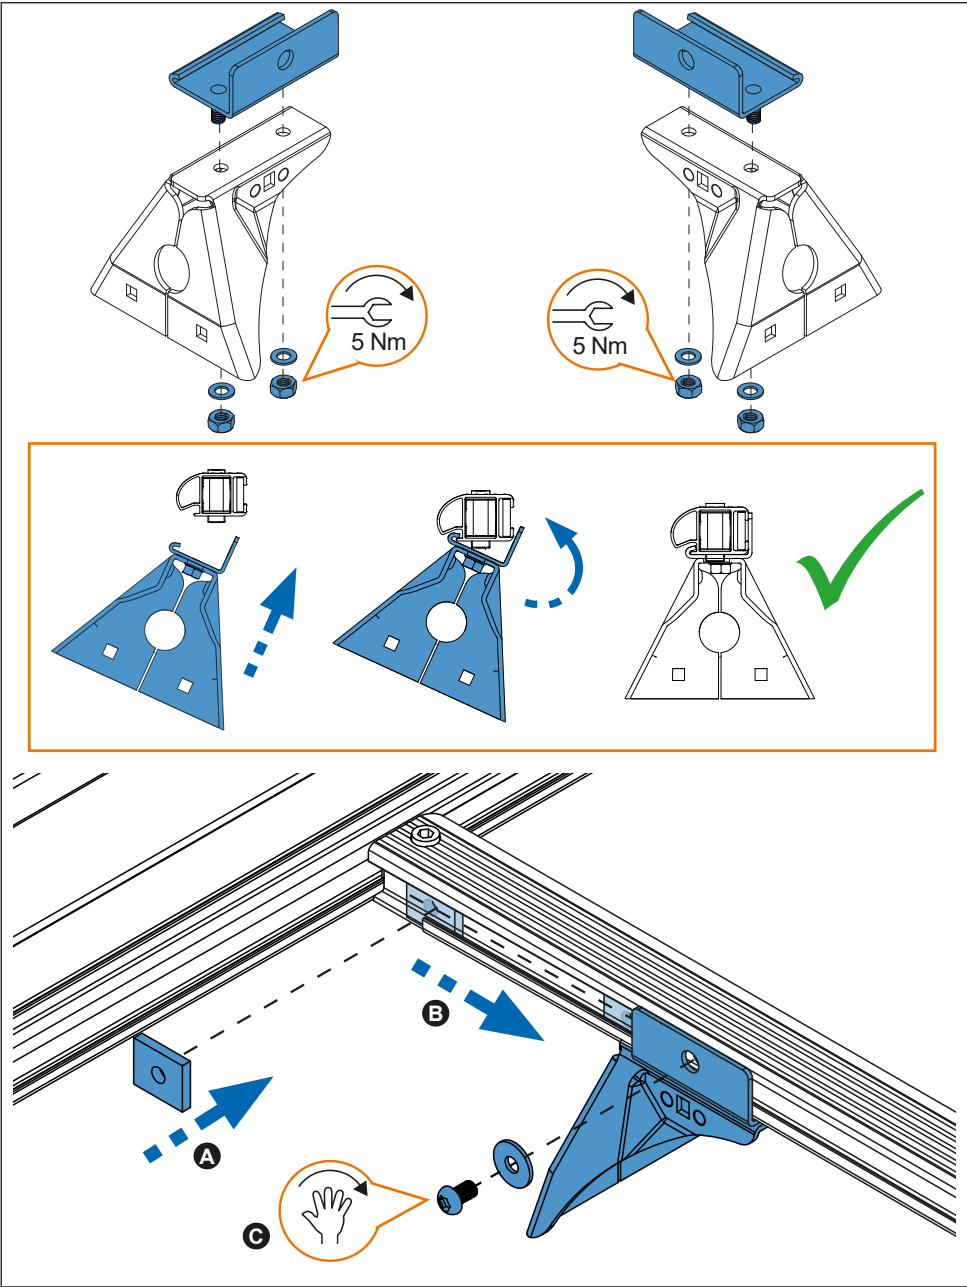

18.

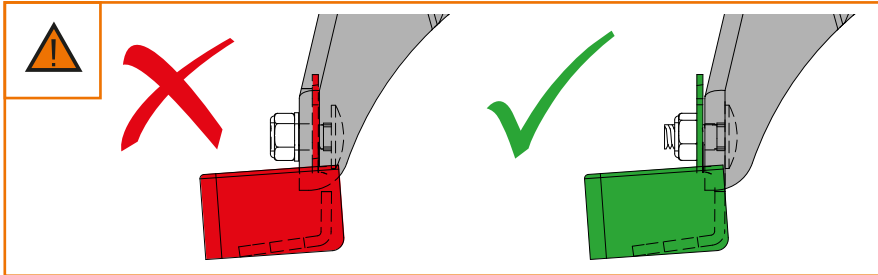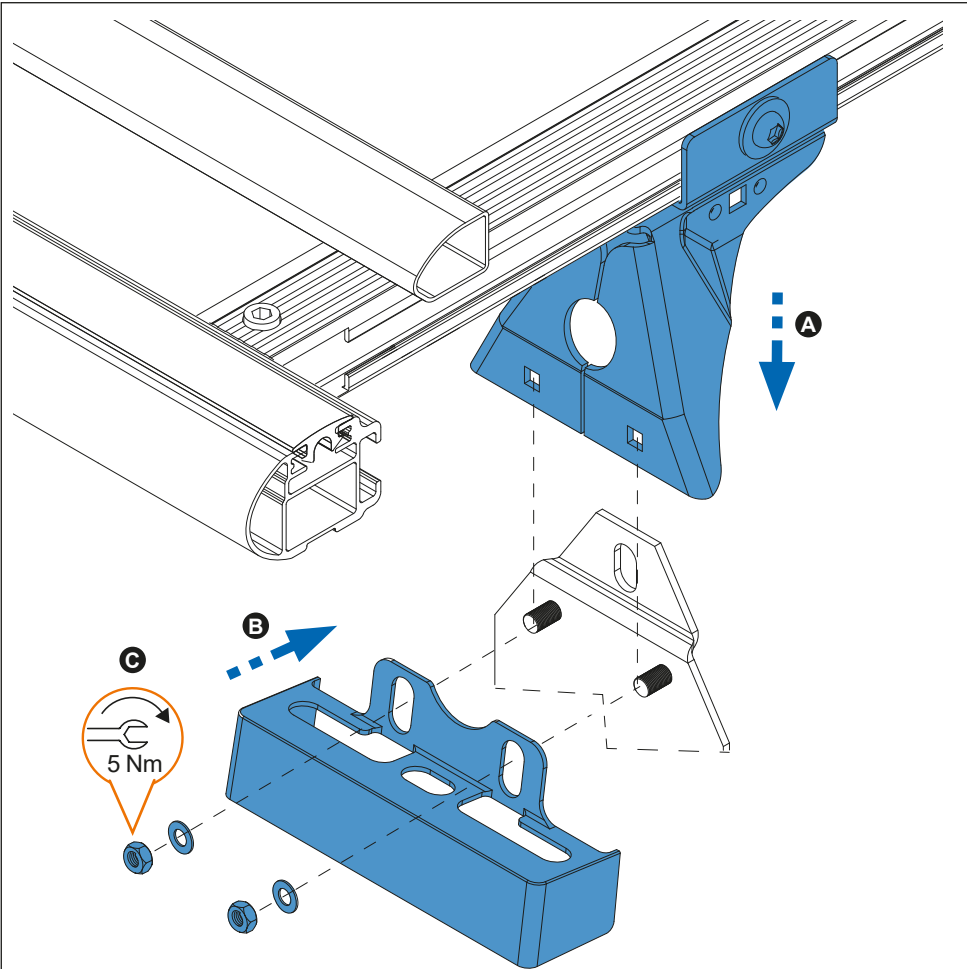

19.

